

DWLG-MI-MAJ

MODELS: CKRUBY30, CKRUBY35

Installation Instructions



Leave this manual with party responsible for use and operation.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

CAUTION: Logs are fragile, handle with care.

NOTICE: To simplify the installation process, positively identify each individual log before beginning installation.

MODEL: CKRUBY30

NOTE: Do not install glass media so that it obstructs or falls down into the pilot area. See Figure 10 with dotted area around no placement zone.



Figure 1.

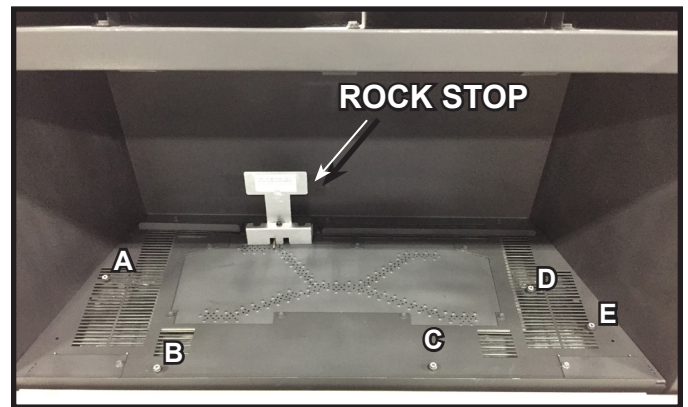


Figure 2.

Glass media: The CKRUBY30 comes standard with glass media. Refer to the CKRUBY installation manual for instructions on how to properly install the glass media in the appliance. The glass media should not be installed until log #4 is installed.

LOG #1 : Locate cutout on the bottom of Log #1. See Figure 3. Place the right end of Log #1 against shoulder screw E, then rotate counterclockwise until it contacts shoulder screw D. The left end of Log #1 will rest on the rock ledge. See Figure 4.

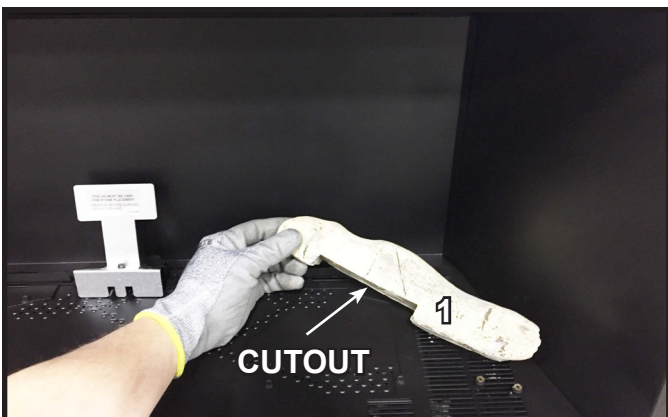


Figure 3. Locating Log Cutout

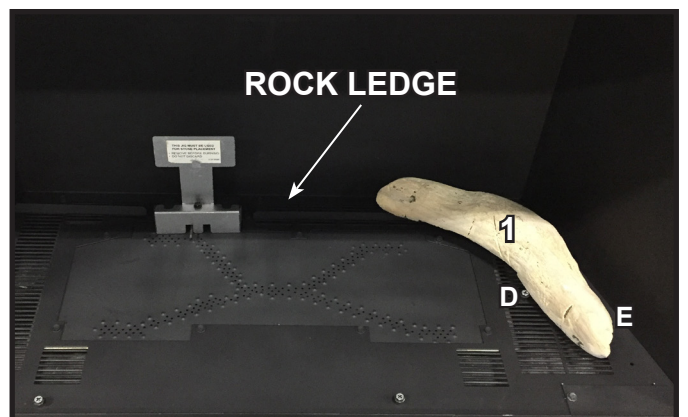


Figure 4. Log #1 Installed

LOG #2: Locate the Y-end of Log #2 and place it against shoulder screw B indicated in Figure 5. The right end of Log #2 should rest on the back side of the high point of Log #1. The nub of Log #2 should make contact with burner. See Figure 5.

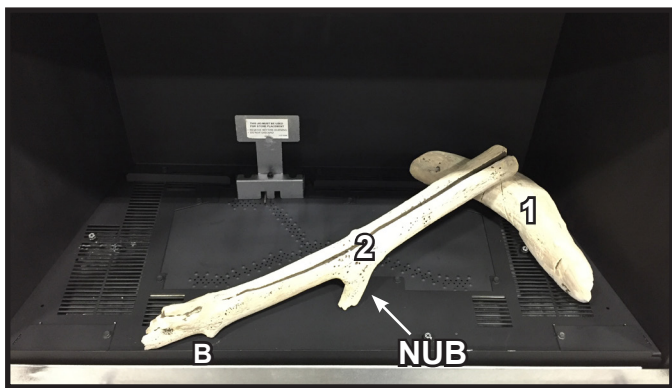


Figure 5. Log #2 Installed

LOG #3: Place the jagged end of Log #3 against shoulder screw A. The right end of Log #3 should rest on the top of Log #2 at the base of the knot. See Figure 6.

LOG #4: Place Log #4 with curve facing right. Left end of Log #4 will sit in front of shoulder screw C and against the front edge of the basepan. See Figure 7. The right end of Log #4 will rest on Log #1. See Figure 7.



Figure 6. Log #3 Installed



Figure 7. Log #4 Installed

Add Media: Refer to media installation instructions and add media to the base pan. Ensure the pilot area with the dotted lines is free from media. See Figure 8 and 9.

LOG #5: Remove rock stop. See Figure 8. Place Log #5 with Y-end so that the tip edge of log is flush with right side of pilot hood. Left end of Log #5 will rest on top of Log #3 and make contact to left side of firebox. Lean short leg of Y-end against back of firebox. See Figure 9.

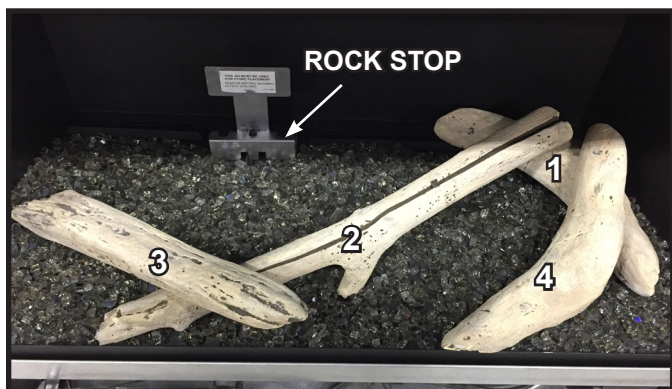


Figure 8. Media Installed

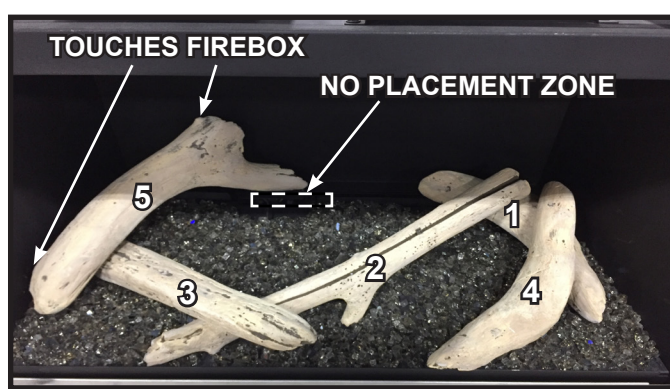


Figure 9. Log #5 Installed and Jig Removed

MODEL: CKRUBY35

NOTE: Do not install glass media so that it obstructs or falls down into the pilot area. See Figure 10 with dotted area around no placement zone.



Figure 1.

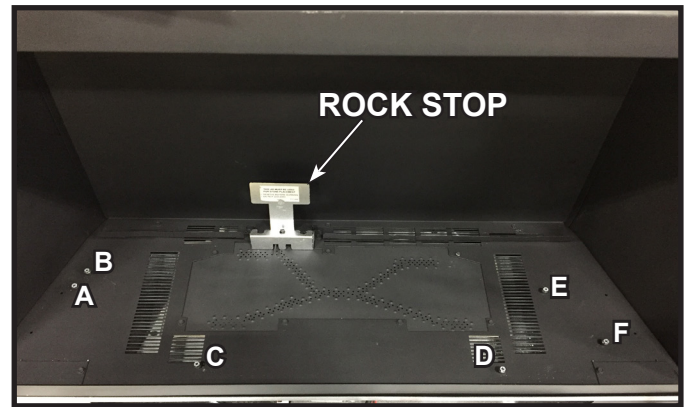


Figure 2.

Glass media: The CKRUBY35 comes standard with glass media. Refer to the CKRUBY installation manual for instructions on how to properly install the glass media in the appliance. The glass media should not be installed until log #4 is installed.

LOG #1 : Log 1: Locate the cutout on the bottom of Log #1. See Figure 3. Place the right end of Log #1 against shoulder screw F, then rotate it counterclockwise until it contacts shoulder screw E. The left end of Log #1 will rest on the rock ledge. See Figure 4.

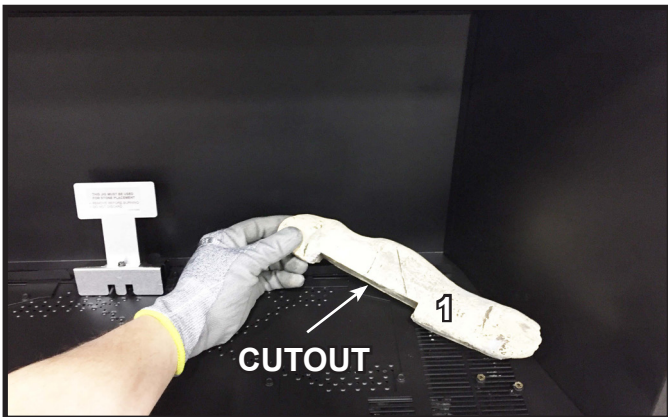


Figure 3. Locating Log Cutout

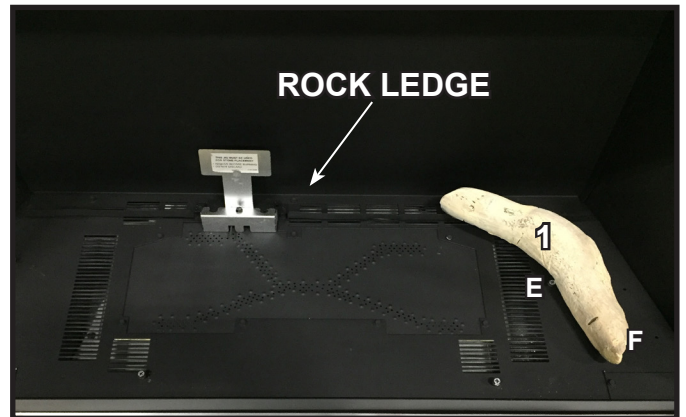


Figure 4. Log #1 Installed

LOG #2: Locate the Y-end of Log #2 and place it against shoulder screw C indicated in Figure 5. The right end of Log #2 should rest on the back side of the high point of Log #1. The nub of Log #2 should make contact with burner. See Figure 5.

LOG #3: Place the jagged end of Log #3 between shoulder screw A & B by left wall of firebox. The right end of Log #3 should rest on the top of nub on Log #2. See Figure 6.

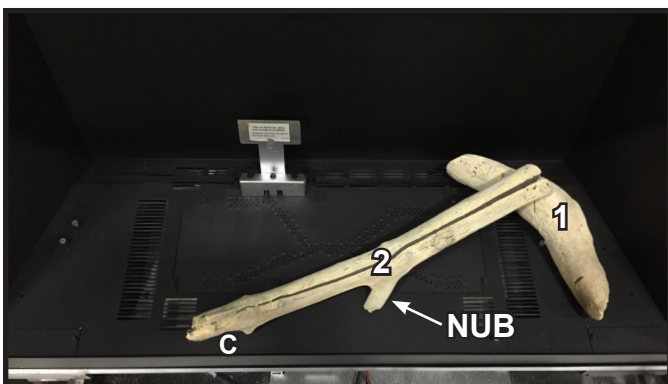


Figure 5. Log #2 Installed



Figure 6. Log #3 Installed

LOG #4: Place Log #4 with curve facing right. Left end of Log #4 will sit in front of shoulder screw D and against the front edge of the basepan. The right end of Log #4 will rest on Log #1. See Figure 7.

Add Media: Refer to media installation instructions and add media to the base pan. Ensure the pilot area with the dotted lines is free from media. See Figure 8 and 9.



Figure 7. Log #4 Installed

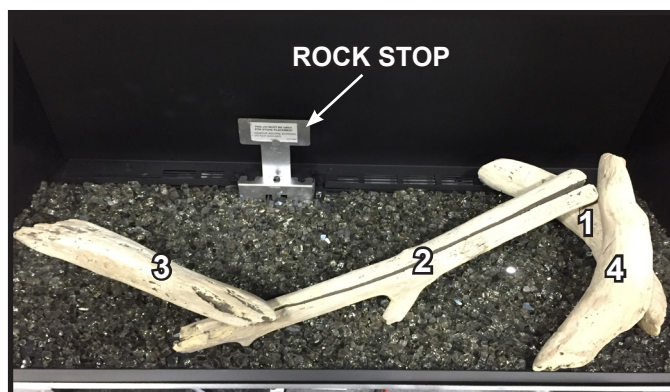


Figure 8. Media Installed

LOG #5: Remove rock stop. See Figure 8. Place Log #5 with Y-end so that the tip edge of log is flush with right side of pilot hood. Left end of Log #5 will rest on top of Log #3 and will sit 1 in. from firebox wall. Lean short leg of Y-end against back of firebox. See Figure 9.

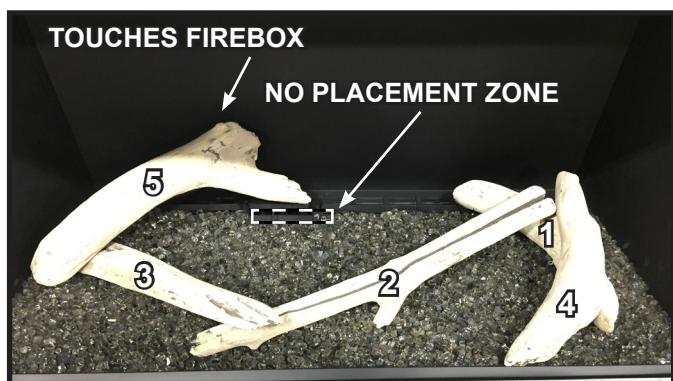


Figure 9. Log #5 Installed and Jig Removed

Please contact your Majestic dealer with any questions or concerns.

For the location of your nearest Majestic dealer, please visit www.majesticproducts.com.

Majestic, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.majesticproducts.com